



# SENTINELLE

by SENTIDRIVE

FR

UK

IT

DE

ES

———— Quick Start Guide ————

# Welcome

to the Sentidrive community!

## Register your **Sentinelle**

To enable the Sentidrive service :

- 1 Note the S/N number on the back of the Quick Start Guide and the KEY ID.
- 2 Visit our website: **www.sentidrive.com** or on the Sentidrive App, and create a user account or log in if you already have one.
- 3 Enter your S/N number and KEY ID in the «Register a device» section
- 4 Finally, choose the subscription formula that suits your needs.

In order to benefit from the Sentidrive service, it is necessary to subscribe to a subscription, more information about [www.sentidrive.com](http://www.sentidrive.com)

Essential recording before the device is lit. Without active registration, the service is not available.

## Box contents



Main unit



Front camera



Rear camera



Microphone



Power box



Antenna



Mounting support



Accessoires



User guide

## Description of the Sentinelle



### Status of the Sentinelle :

- |       |     |                               |
|-------|-----|-------------------------------|
| Power | ●   | Normal operation              |
|       | ○ ● | Sleep mode (every 30 seconds) |
|       | ○   | Unconnected power             |
| <hr/> |     |                               |
| GPS   | ●   | Connected GPS                 |
|       | ○ ● | GPS signal search (blinking)  |
|       | ○   | Sleep mode                    |
| <hr/> |     |                               |
| 4G    | ●   | Connected 4G                  |
|       | ○ ● | 4G network search (blinking)  |
|       | ○   | Sleep mode                    |

The live streaming feature is available through the app to make it easier to adjust cameras.

\* Before any adjustment manipulation, remove the fastening screw using the key provided.



Height setting




Rotating setting  
Maxi 90°  
(180° available through the app)



## Installation on the vehicle

We recommend that you install this material by a professional.

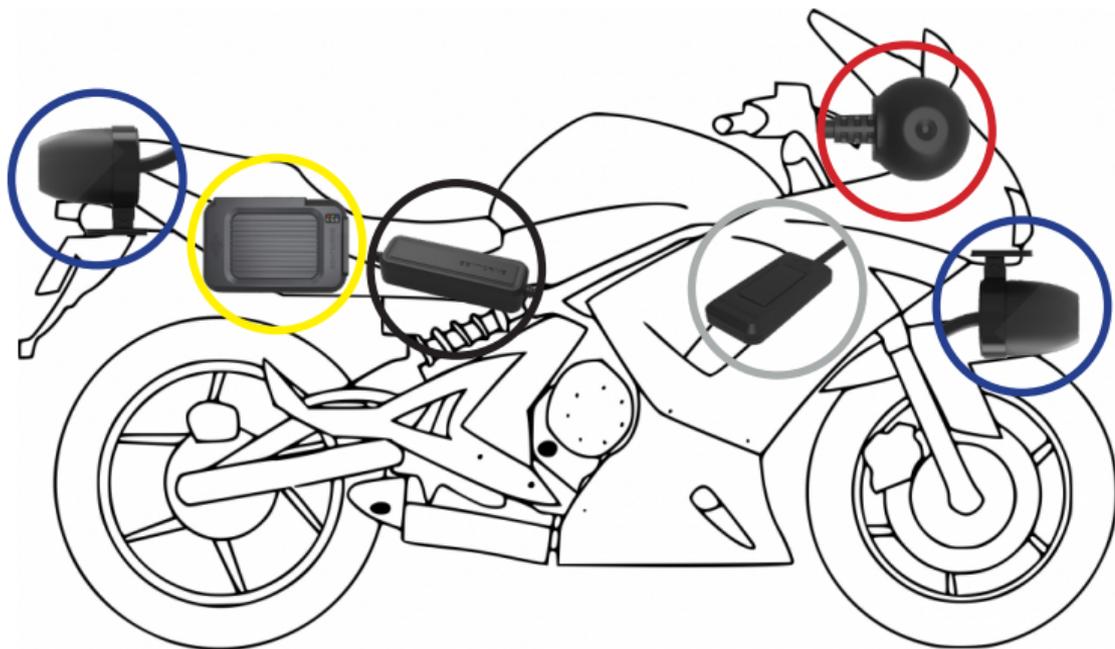

Make sure that the positioning of the elements does not interfere with the proper operation of the two-wheeler. Make sure that the positioning of the different cables does not pass over protruding parts of the two-wheeler and that the cables are secured by clamping collar.

- The Main unit can be installed under the saddle or in the trunk of the two-wheeler and must be securely secured. Fixing can be done using three methods (see next page).
- 

The front camera can be installed:

- on the handlebars
- on the top of the front fairing
- on the bottom of the front fairing between the latter and the fender

Watch out for fork travel!

- The rear camera can be installed:

- on the mud guard
  - on the holder of the license plate
  - under the wheel passage
- 

- The antenna must be deported to the exterior fairing of the vehicle. Make sure to put the inscription «This side faces the sky» facing the sky.
- 

- The microphone should be placed in the wind-free position, ideally within the cockpit
- 

- The power box must be placed towards the vehicle's battery to make the connection between the battery and the central unit. Its connection is explained in the paragraph «power supply.»

Use only the double-sided adhesive tape provided in the package!

\* Recommendation of the installation of double-sided duct tape:

- Prepare the surface with a grease remover and make sure there is no dust and other dirt that could interfere with the grip.
- Place the tape on the sticky item (e.g. cameras)
- Glue the element on the two-wheeler with moderate pressure for 10 seconds.

Applying on a surface of less than 10°C is not recommended.



Installation by double-sided duct tape\*.



Mechanical installation. Used only the supports and screws provided in the package.




Installation by mounting collar\*\*. Ensure compatibility with the operating temperatures produced.

\*\* Unsuperated mounting collar



Installation by double-sided duct tape\*. Microphone sheltered from the wind.

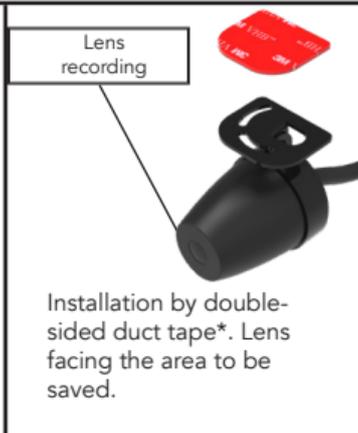

Installation by double-sided duct tape\*. Lens facing the area to be saved.




Installation by double-sided duct tape\*.



Installation by double-sided duct tape\*. The inscription «This side faces the sky» in front of the obligatory sky.

## Electrical connection

The realization of the electrical connection by a professional is advised.

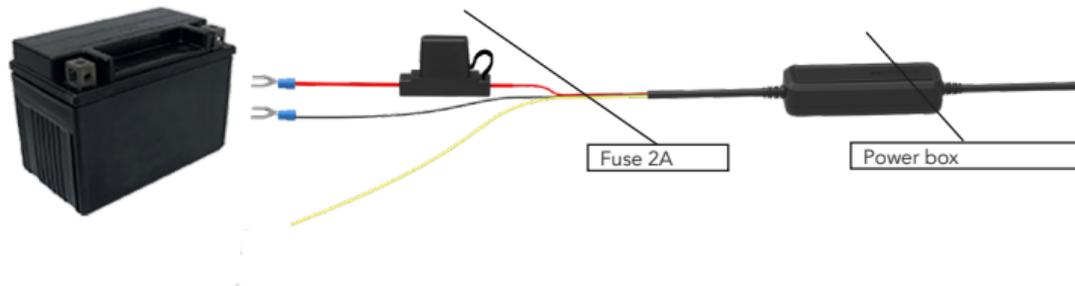

Use 12 V after contact

- Connect the black cable (negative) to the battery negative (-)
- Connect the red cable (positive) to the battery positive
- Connect the Yellow Cable on a 12 Volt after contact (example: by-caring)

The watch for your Sentinel needs a permanent power supply (tracker function).  
In order to avoid untimely disconnections, we recommend a welding installation if possible.

## How the Sentinelle works

Before the first start, the registration of your Sentinel must be made. To do this, follow the procedure described on page 2.

- 1 Download the Sentidrive app for iOS (Apple store) or Android (Google Play):



- 2 Connect your Sentinelle to your smartphone via Wi-Fi via the settings:  
**Wi-Fi Name** = IMEI // **Password by default** = 8 digits of the IMEI number
- 3 Launch the app and log in using your user account (account used when registering your Sentinelle on the site: **www.sentidrive.com**)
- 4 Let yourself be guided in taking control of your Sentinelle.

*Apple, the Apple logo are trademarks of Apple inc., registered in the US and other countries. Android and Google Play are registered trademarks of Google*

## Care guide / Warranty

### BATTERY

The Sentinel has an internal battery. It is strictly forbidden to approach a flame, or risk explosion. Beware, there is a risk of explosion if the battery is replaced by an incorrect type battery. Always place your used electronics and batteries, as well as their packaging, at the appropriate collection points.

### TEMPERATURE

In normal use, the unit may heat up. In the event of an abnormal temperature, the case will be turned off to protect its components. Avoid leaving your case in full sun. Sentinel remains operational in the following temperature range: -10C/70C.

Prolonged exposure to higher or lower temperatures can damage the product.

### 4G / WIFI TRANSMISSION

The Sentinel incorporates a 4G GSM and WIFI transmission system. The same recommendations for use as for a mobile phone should be followed.

### WARRANTY


The explanations and specifications contained in this user guide are provided only as information and can be changed without prior notification. SAS SENTIDRIVE cannot be held directly or indirectly responsible for any accidental data damage or loss resulting from an error or omission in this document.

Sentinel is guaranteed against any defects of parts or manufacture for 24 months from the date of purchase, if the purchase was made directly with the company SAS SENTIDRIVE or a licensed dealer. The opening of the product by a technician not authorized by SAS SENTIDRIVE cancels the warranty.

### RECYCLING

The logo opposite indicates that neither the product nor its used electronic accessories can be disposed of in other household waste. Please use the return and collection systems available in your country for the proper and safe disposal of this product.



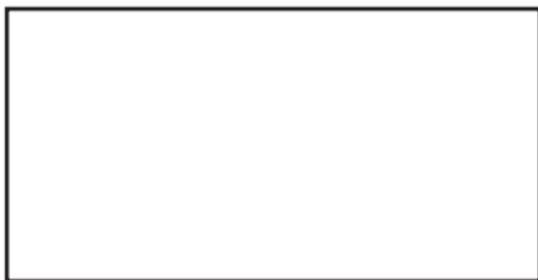

[www.sentidrive.com](http://www.sentidrive.com)

SAS SENTIDRIVE  
46 rue de Marseille 69330 MEYZIEU, FRANCE